



Processing Guide

High Performance 4-4800 VP

Very high impact resistance and ductility for demanding technical applications

Cubic Ink [High Performance 4-4800 VP](#) offers a strong balance of impact resistance, toughness and thermal as well as UV-stability. The formulation with minimized water uptake also features a favorable regulatory profile, particularly regarding cytotoxicity.

Available in many colors.



Materials can be used in



Medical Applications



Automotive



Household



Eyewear

Performance Indicators

Izod notched
HDT B
Weathering
Cytotoxicity-Test

44 J/m
90 °C
Very Good
Passed

Preparation

Printing

Washing

Post-Curing



LCD, DLP, mSLA

1 - 4 min Cleaner 400 or IPA

Cure with UV

Preparation

Safety Guideline

High Performance 4-4800 VP is a chemical formulation in the liquid state and has to be treated as such until it is fully cured. Please use personal lab protection equipment such as appropriate gloves, goggles and lab coat. Wash contaminated body parts and equipment directly after occurrence and change contaminated gloves immediately. Do not consume the resin.

Danger





The information given in this document do not constitute a legally binding SDS, which will be provided at purchase.

Storage and Preparation

Please make sure the resin is stored at room temperature.

Please make sure the resin is not exposed to light.

Please stir resin prior to use.

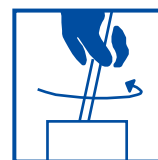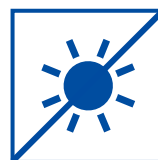

Printing

Print Settings

High Performance 4-4800 VP printed part properties may vary with printer, print settings, object orientation, part geometry and post-processing. The shown recommendations of printer and print settings are based on Cubic Ink's experiments and experience and do not include all possible processes and feasibility of the material (Table 1 - 3). The processor is welcome to explore the workflow regarding printer and print settings since High Performance 4 - 4800 VP is compatible with a broad range of LCD, DLP, mSLA machines. Nevertheless, Cubic Ink supports and customizes the processing guidelines together with their partners. If not stated otherwise specimens and objects are printed vertically.

Printing

General Curing Parameters

In Table 1 different curing characteristics are presented. The necessary critical energy as well as the penetration of depth indicate the reactivity and curing in depth abilities of the liquid resin. High Performance 4-series is highly reactive with high penetration depth in uncolored state. Please contact us for further guideline.

Table 1: Curing Parameters measured at Cubic Ink for High Performance 4-4800 VP in uncolored and black.

Measurement	Uncolored		Black	
<u>405 nm, 8 mW/cm²:</u>				
E _c [mJ/cm ²]	3.17		2.62	
D _p [mm]	0.47		0.20	
Thickness after 0.5 s of exposure [mm]	0.15		0.07	
Thickness after 1 s of exposure [mm]	0.37		0.23	
<u>385 nm, 11 mW/cm²:</u>				
E _c [mJ/cm ²]	3.10		3.72	
D _p [mm]	0.19		0.18	
Thickness after 1 s of exposure [mm]	0.22		0.18	
Thickness after 4 s of exposure [mm]	0.50		0.43	
x-y-Compensation [%]	2.4 ¹	1.5 ²	1.6 ³	0.4 ⁴
z-Compensation [mm]	0.20 ¹	0.10 ²	0.05 ³	-0.15 ⁴
Printable overhangs [°]	<20 ¹	up to 20 ²	up to 20 ³	<20 ⁴
Minimal wall thickness unsupported [mm]	0.6 ¹	0.2 ²	0.4 ³	0.6 ⁴
Minimal wall thickness supported [mm]	0.4 ¹	0.2 ²	0.4 ³	0.4 ⁴
Minimum pin thickness [mm]	0.5 ¹	0.5 ²	0.5 ³	0.5 ⁴
Minimum hole thickness vertical [mm]	-	-	1.0 ³	1.0 ⁴
Minimum hole thickness horizontal [mm]	-	-	1.0 ³	1.5 ⁴

¹Measured with samples printed and cured via Asiga Pro 4K (DLP 385 nm, 11 mW/cm², 100 µm) and 2x 30 min Formcure L 80 °C;

²Measured with samples printed and cured via via Formlabs Form 4 (LCD 405 nm, 11 mW/cm², 100 µm) and 2x 30 min Formcure L 80 °C;

³Measured with samples printed and cured via Asiga Pro 4K (DLP 385 nm, 11 mW/cm², 50 µm) and 2x 30 min Formcure L 80 °C;

⁴Measured with samples printed and cured via Formlabs Form 4 (LCD 405 nm, 11 mW/cm², 50 µm) and 2x 30 min Formcure L 80 °C; For more details, please contact us.

Printing

Print Settings

Table 2: Suggested curing times depending on wavelength, color, printing thickness and intensity of light source for High Performance 4-4800 VP.

Wavelength	Color	Layer thickness [μm]	11 mW/cm ²	8 mW/cm ²	5 mW/cm ²	2 mW/cm ²
385 nm	Uncolored	50	0.4 s	0.5 s	0.9 s	2.2 s
	Uncolored	100	0.5 s	0.7 s	1.1 s	2.9 s
	Black	50	0.5 s	0.7 s	1.1 s	2.7 s
	Black	100	0.7 s	0.9 s	1.4 s	3.6 s
405 nm	Uncolored	50	-	0.4 s	0.6 s	1.5 s
	Uncolored	100	-	0.5 s	0.7 s	1.8 s
	Black	50	-	0.5 s	0.8 s	2.0 s
	Black	100	-	0.6 s	1.0 s	2.5 s

High Performance 4-4800 VP was tested on several printers such as

Prusa SL1S Speed (LCD, 405 nm, 2 mW/cm²), Phrozen 8K Mighty (LCD, 405 nm, 2 mW/cm²), Phrozen 8K Mega S (LCD, 405 nm, 3 – 5.6 mW/cm²), Asiga Pro 4K80 (DLP, 385 nm, 2 - 11 mW/cm²), Formlabs Form 4 (LCD, 405 nm, 2 - 11 mW/cm²). For more information, please contact us.

Table 3: Examples of print settings at Cubic Ink for High Performance 4-4800 VP in uncolored and black.

Printing system	Color	Layer thickness [μm]	Exposure time bottom layer [s]	Exposure time default layer [s]
Prusa SL1S Speed (LCD, 405 nm, 2 mW/cm ²)	Uncolored	50	10.0	1.80
Formlabs Form 4 (LCD, 405 nm, 11 mW/cm ²)	Uncolored	100	1.0	0.33
	Black	50	3.2	0.36
Asiga Pro 4K80	Uncolored	100	4.4	0.52
(DLP, 385 nm, 11 mW/cm ²)	Black	50	5.9	0.49

Washing

Removing & Washing

- Washing with [Cubic Ink Cleaner 400](#) or isopropyl alcohol (IPA) up to 4 min
- Ultrasonic bath or adequate mixing equipment is beneficial
- Rinse with IPA optional

Cleaning

- Treatment with compressed air optional

Drying

- Let dry at ambient conditions for at least 30 min
- To accelerate the process: Dry for 30 – 60 min at 50 °C

Post-Curing

[High Performance 4-4800 VP](#) needs to be post-cured to reach its final material properties. The post-cure used on the TDS (Version 1) contained 2 x 30 min UV post-cure via Formlabs Formcure L at 80 °C (LED, 375 and 405 nm). Other examples of post-curing are shown in Table 4 and 5 to emphasize different effects of UV-curing chambers, wavelengths, intensities, time and additional thermal post-cure.

[High Performance 4-4800 VP](#) is post-cured via

- UV-cure is necessary
- Temperature in UV-chamber as high as possible (≥ 80 °C)
- If possible, use vacuum or nitrogen atmosphere
- Thermal post-cure can be beneficial if low intense light chambers were used to gain full potential of material properties (e.g. 2 h at 100 °C)

Post-Curing

Table 4: UV post-processing carried out at Cubic Ink for High Performance 4-4800 VP Uncolored (printed with 50 µm).

Post-Process	E-Modulus [GPa]	Tensile strength [MPa]	Elongation at break [%]	HDT B [°C]	Izod notched [J/m]
2 x 10 min Formcure L, 80 °C	-	-	-	76	41
2 x 30 min Formcure L, 80 °C	1.7	43	15	90	44
2 x 90 min Formcure L, 80 °C	1.8	46	12	97	40
2 x 2000 flashes Otofash, N ₂	1.1	32	25	54	50
2 x 6000 flashes Otofash, N ₂	1.5	40	19	77	36
2 x 30 min 3D Systems, 60 °C	1.2	32	16	76	50
2 x 90 min Prusa	1.9	28	15	65	45
2 x 30 min Prusa + 2 h 100 °C	1.2	34	15	78	55
2 x 90 min Phrozen	1.0	26	22	54	50

Formlabs Formcure L = LED 375, 405 nm; NK Optik Otofash G171-6 = light-flashes, 350 – 550 nm, N₂; 3D Systems LC-3D post-process unit = 350-550 nm; Prusa CW1S = LED 405 nm; Phrozen = LED 405 nm; thermal post-cure with Memmert UF30 ventilated oven (place only one tray into oven, leave space between objects). Tensile testing Din EN ISO 527-1 5A-specimens, 5 mm/min, 23 °C; HDT B Din EN ISO 75, all specimens printed vertically.

Table 5: UV post-processing carried out at Cubic Ink for High Performance 4-4800 VP Black (printed with 50 µm).

Post-Process	E-Modulus [GPa]	Tensile strength [MPa]	Elongation at break [%]	HDT B [°C]	Izod notched [J/m]
2 x 30 min Formcure L, 80 °C	1.5	36	19	76	42
2 x 90 min Formcure L, 80 °C	1.5	39	22	82	63
2 x 5 min Formcure 2nd, 100 °C	1.7	41	17	89	40
2 x 30 min Formcure 2nd, 100 °C	1.9	47	15	102	42
2 x 6000 flashes Otofash, N ₂	1.5	39	12	69	39
2 x 30 min 3D Systems, 60 °C	1.4	33	19	67	45
2 x 90 min Prusa	1.3	29	28	65	67
2 x 30 min Prusa + 2 h 100 °C	1.3	36	19	67	45
2 x 90 min Phrozen	1.0	23	24	53	-
60 min Asiga Cure, 80 °C, vac.	1.5	37	33	84	-

Formlabs Formcure L = LED 375, 405 nm; Formlabs Formcure 2nd Gen = LED, 405 nm; NK Optik Otofash G171-6 = light-flashes, 350 – 550 nm, N₂; 3D Systems LC-3D post-process unit = 350-550 nm; Prusa CW1S = LED 405 nm; Phrozen = LED 405 nm; Asiga Cure 1.5 L = LED, vacuum, UV and temperature simultaneously; thermal post-cure with Memmert UF30 ventilated oven (place only one tray into oven, leave space between objects). Tensile testing Din EN ISO 527-1 5A-specimens, 5 mm/min, 23 °C; HDT B Din EN ISO 75, all specimens printed vertically.

Post-Curing

General Effects of Post-Curing

- Washing and drying:
 - The washing fluid and time of washing can influence the final material properties.
 - In some cases (e.g. using higher temperatures while post-curing) cracks can occur if not washed as recommended and not dried thoroughly.
- UV-Post-cure:
 - Higher wavelength (e.g. ≥ 405 nm) better for cure in depth, shorter wavelength (e.g. ≤ 365 nm) better for surface cure.
 - Broad spectra light sources or the combination of multiple wavelengths improve the overall curing process.
 - The higher the intensity of a light source, the shorter the time in the curing chamber.
 - Part orientation in the chosen UV-chamber is crucial. Most chambers focus the LED-spots in the middle of the volume. Placing flat objects on the bottom may cause nearly no or less irradiation by light. Curing time may need to be adjusted depending on the geometry of the part.
- UV Post-cure with vacuum or nitrogen atmosphere:
 - Better for surface cure. Less stickiness.
- UV-Post-Cure with simultaneously temperatures above 60 °C:
 - Good for cure in depth and surface cure. Decrease of time in UV-chamber.
 - Not that much depending on the color and geometry of the part, the effect of temperature influences the homogeneity of curing.
- Additional thermal post-cure after finished UV-cure:
 - Good for final cure in depth and surface cure.
 - Recommended temperature varies between 80 - 130 °C for 1 – 5 hours for most materials.

Cubic Ink®
ALTANA New Technologies GmbH

located at

ACTEGA GmbH
Mielestraße 13
31275 Lehrte
GERMANY

Tel +49 (0)5132 5009-600

Cubic.ink@altana.com

www.altana.com

Learn more about Cubic Ink® materials

www.altana.com/cubic-ink

www.altana.de/cubic-ink

Disclaimer

The information contained herein is based on our current knowledge and experience. No warranties, guarantees and/or assurances of any kind, either express or implied, including warranties of merchantability or fitness for a particular purpose, are made regarding any products mentioned herein and data or information set forth, or that such products, data or information may be used without infringing intellectual property rights of third parties. Any information about suitability, use or application of the products is non-binding and does not constitute a commitment regarding the products' properties, use or application. Contractual terms and conditions, in particular agreed product specifications, always take precedence. We recommend that you test our products in preliminary trials to determine their suitability for your intended purpose prior to use. We reserve the right to make any changes and to update the information herein without notice.

Follow us – ALTANA New Technologies GmbH – Cubic Ink®

